Vitris Supra 1.0.1

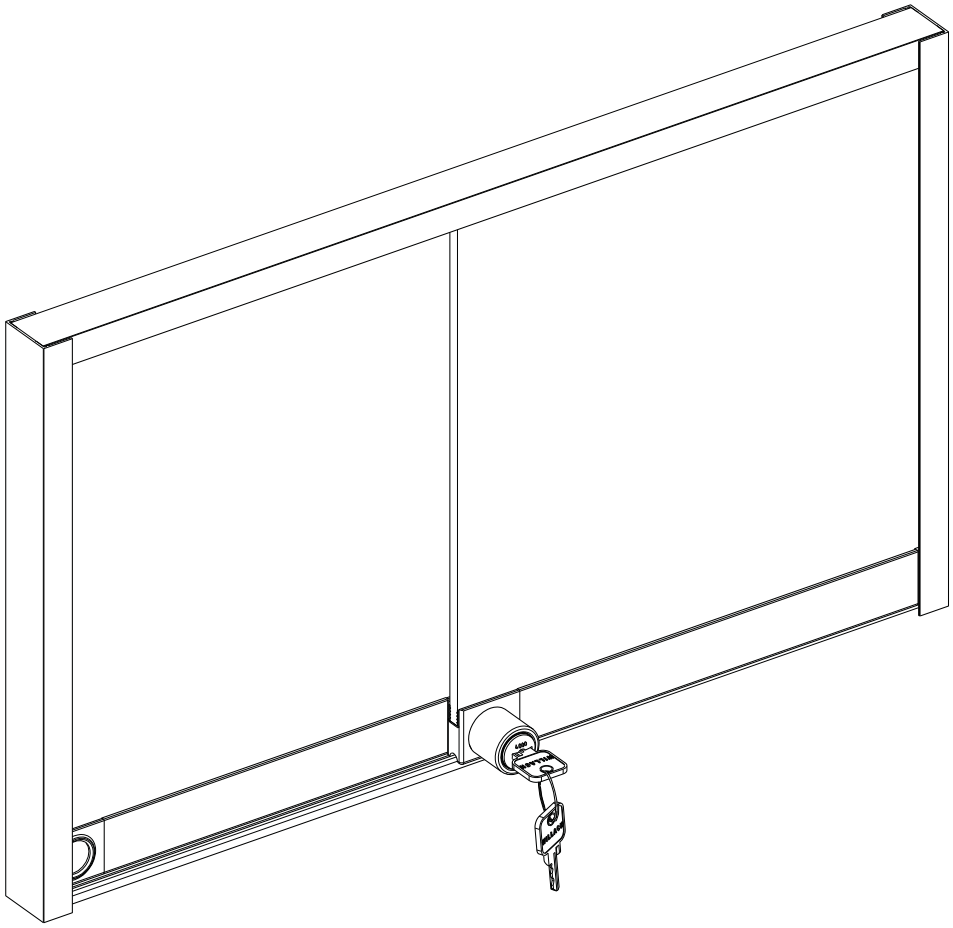

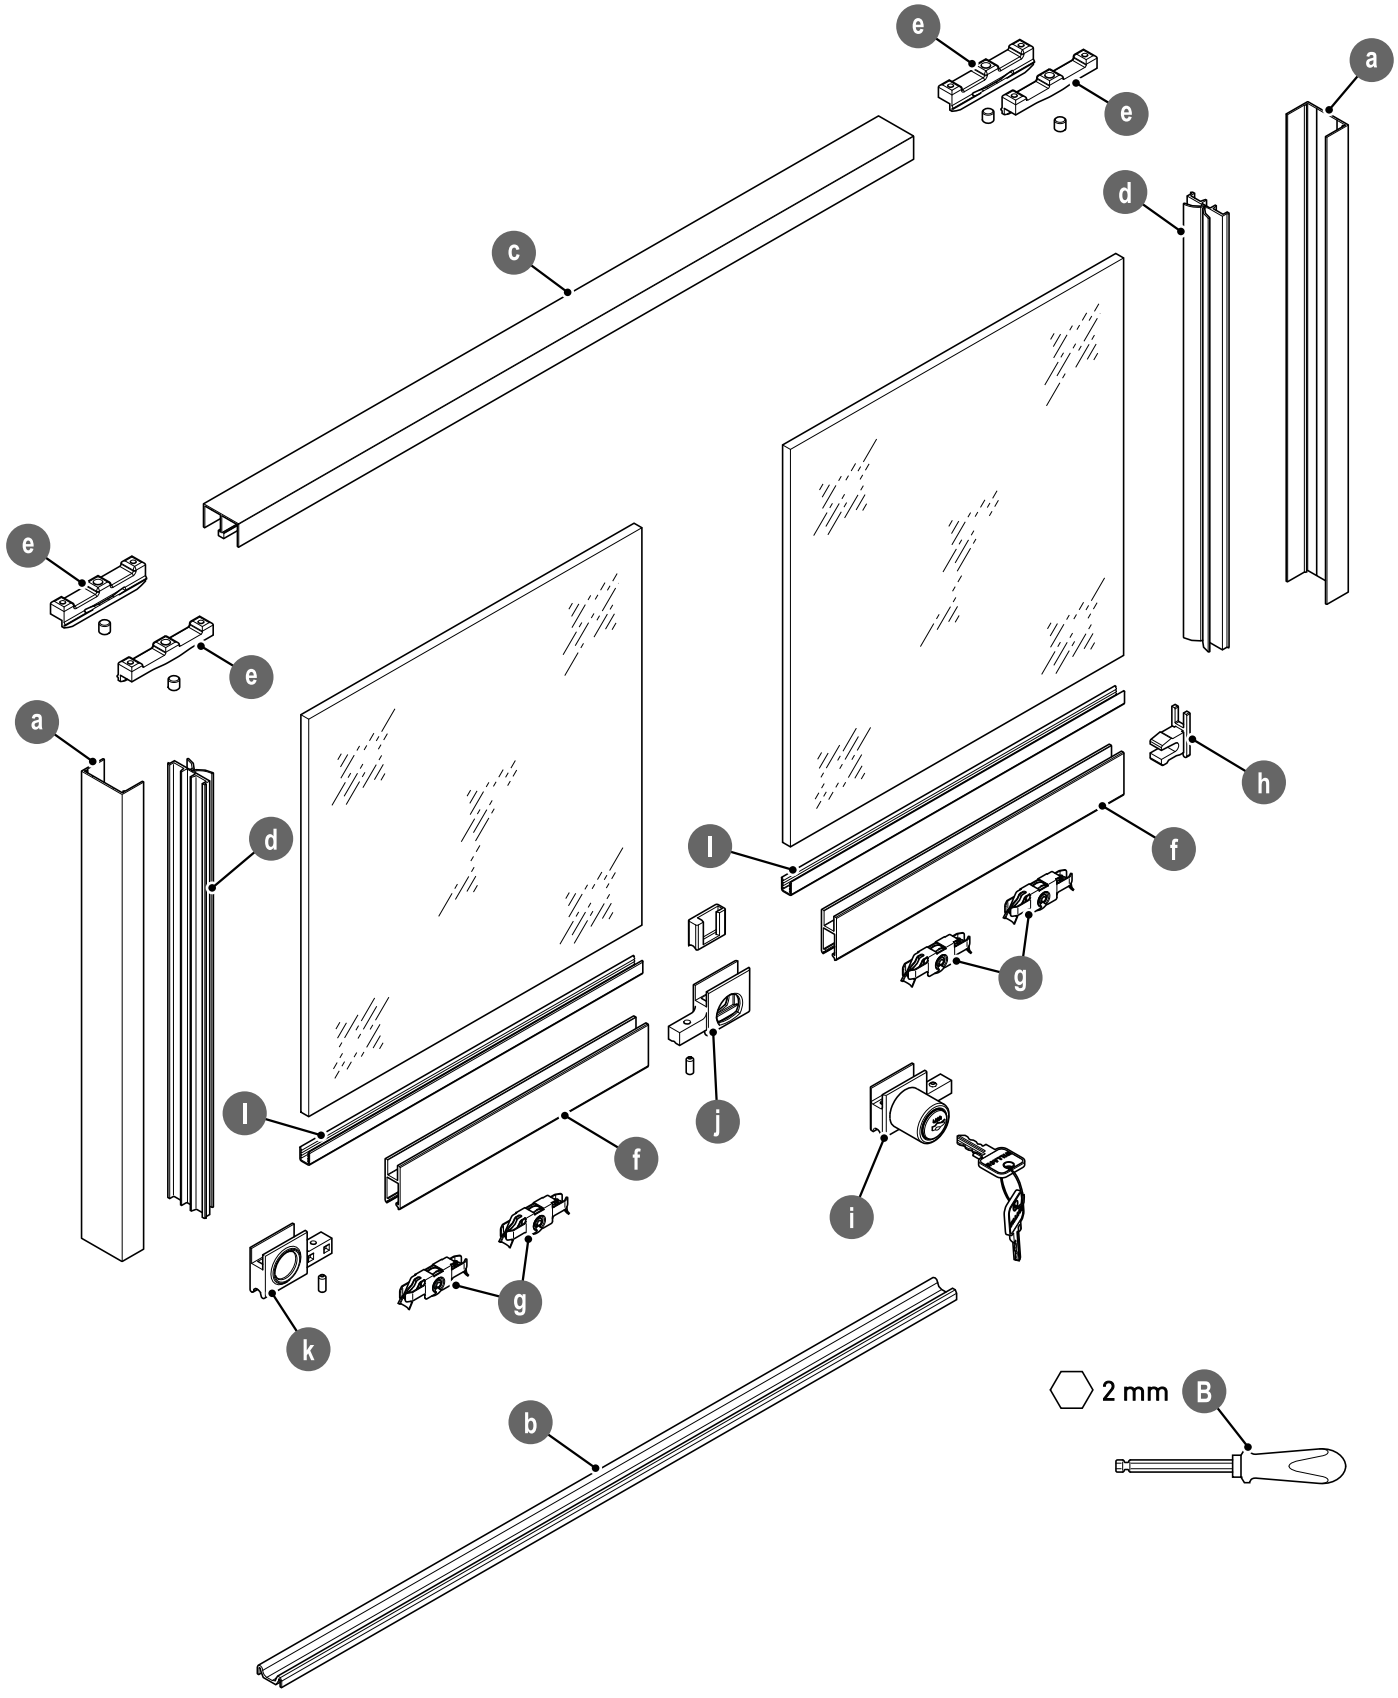
e
e
a
d
c
e
e
a
d
h
l
f
g
l
f
j
i
g
k
b
2 mm
B

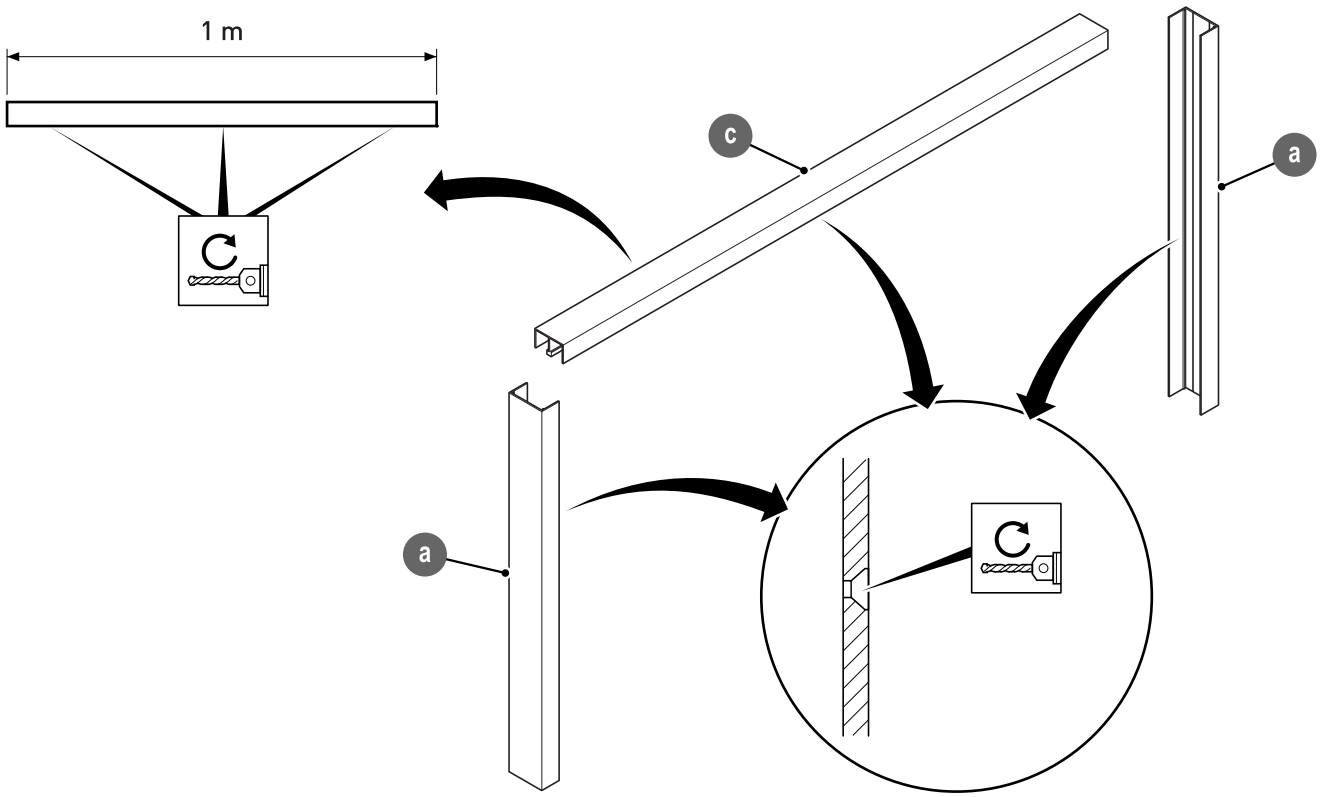
1 m
c
a
a

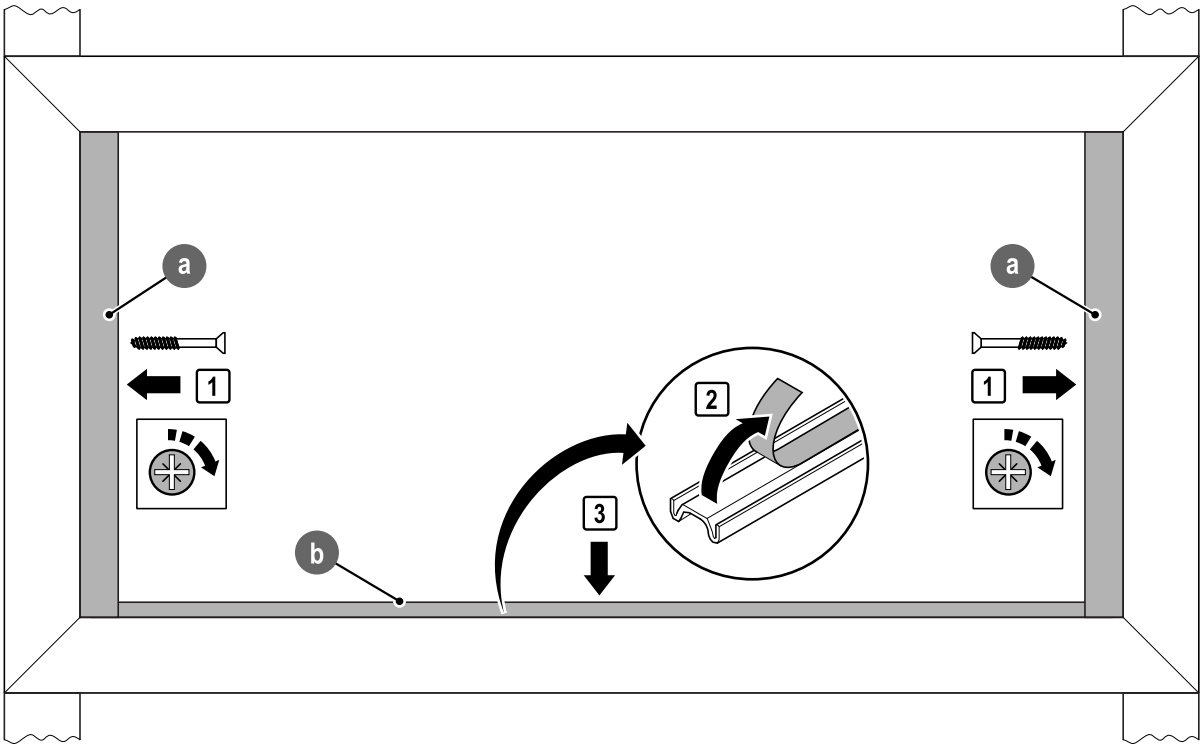
a
a
1
1
2
3
b

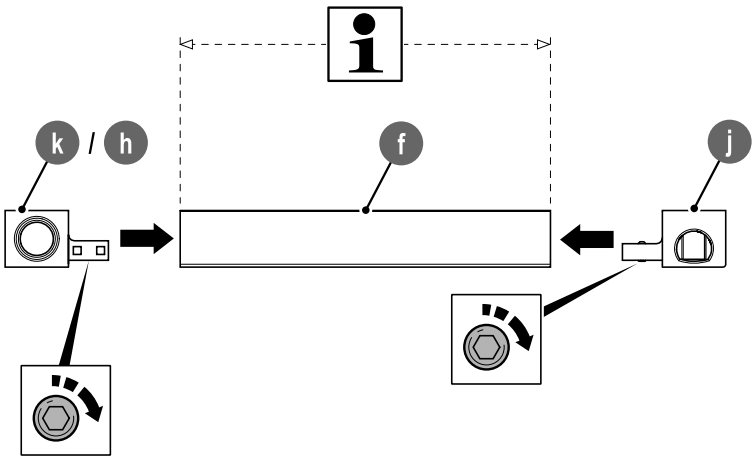

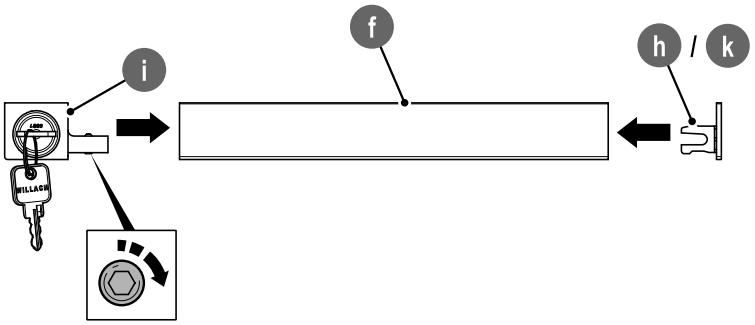

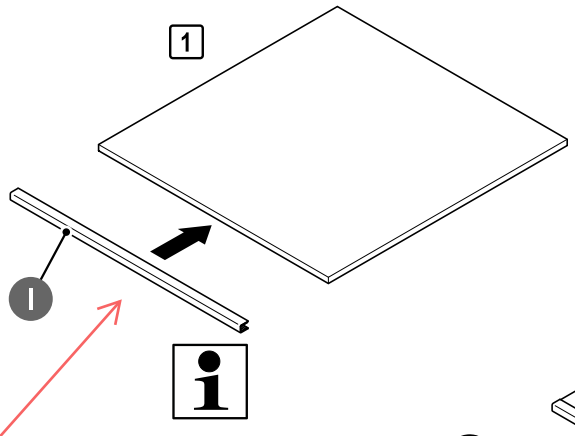

Apply fairy liquid to the outer sides of the black rubber gaskets to ease fitment of the aluminium base profiles

Trim excess gasket with blade

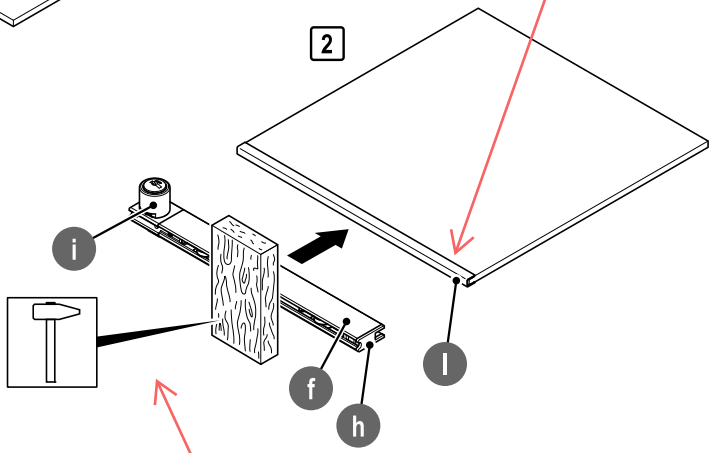

Rubber Mallet and wood for attaching profile to glass

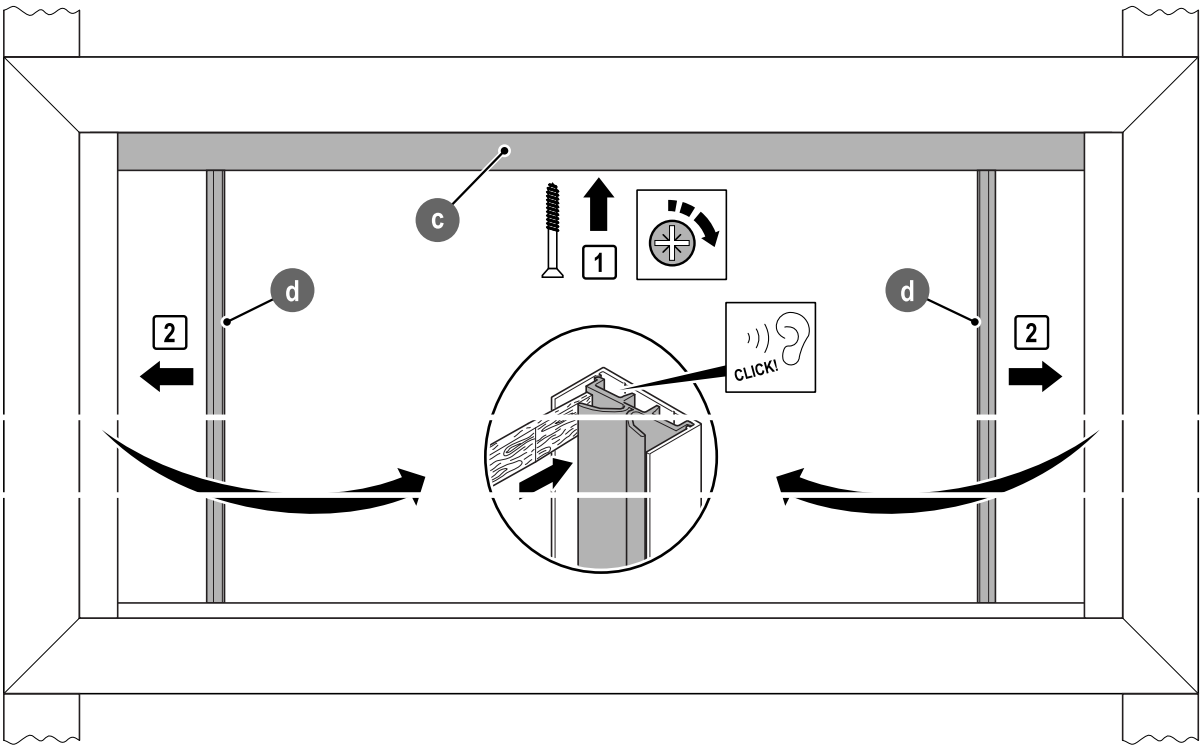
c
1
d
2
CLICK!
d
2

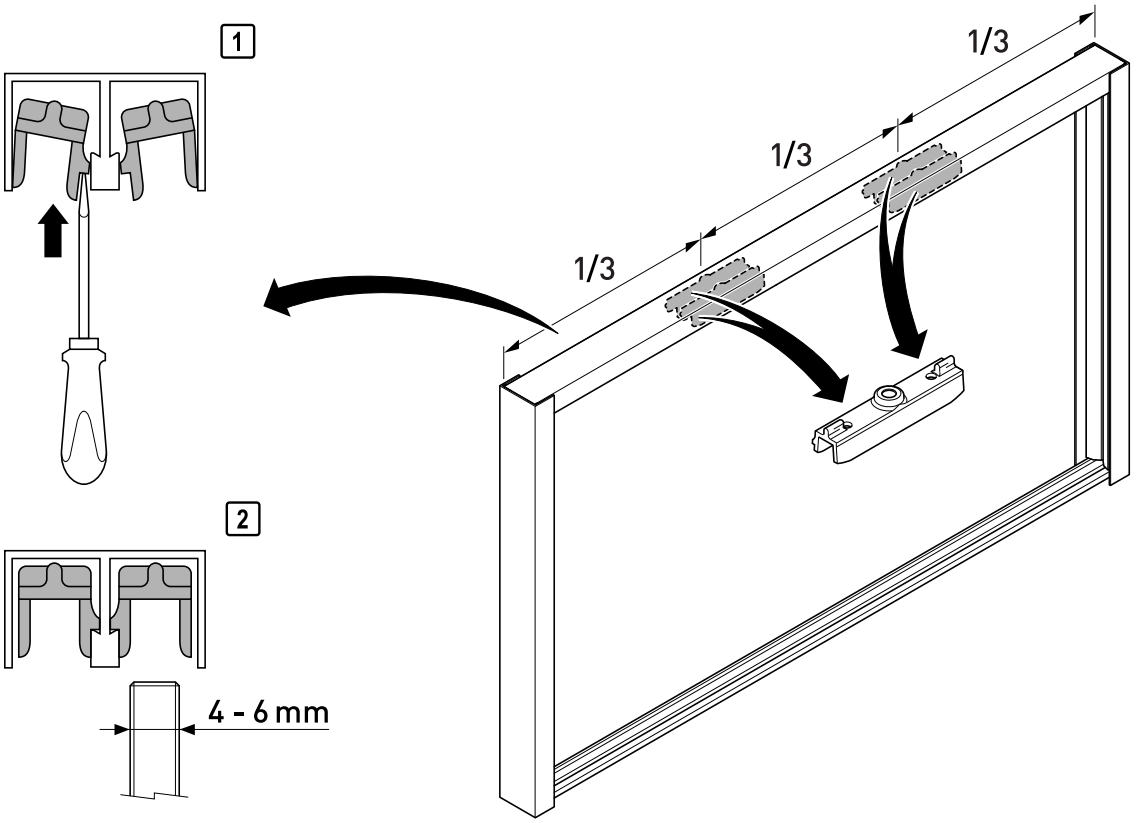
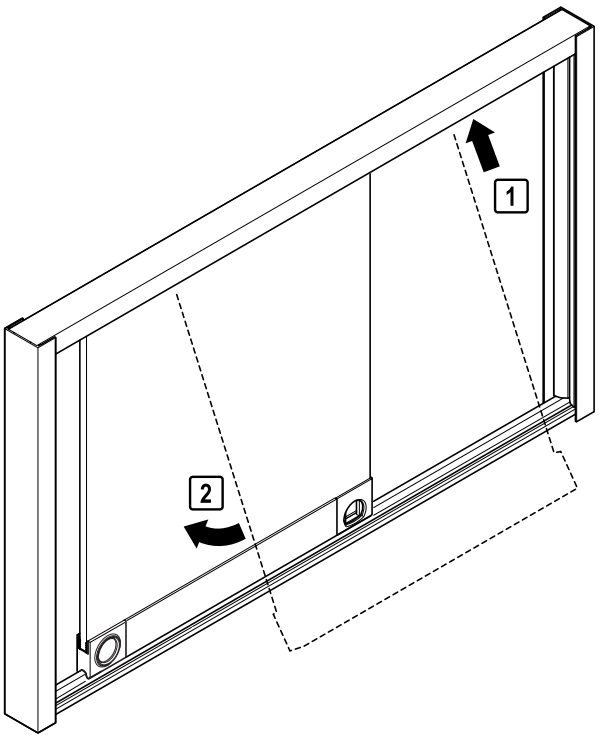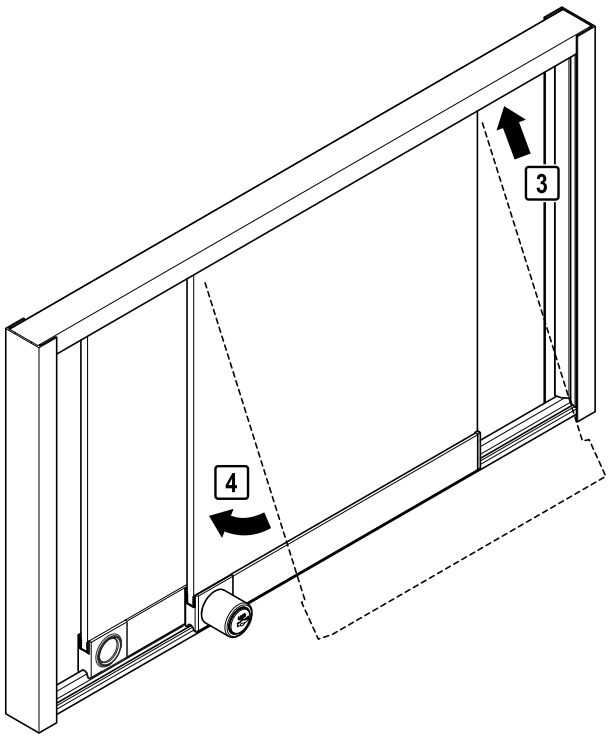
11